

Installation instructions for TORQUE KING

KTM EXC, XC, XC-W, 250-300, 2017 → / HUSQVARNA TE, TX, 250-300, 2017 →
GASGAS EC, EX, 250 - 300, 2021 →



X GRIP



I Scope of delivery TORQUE KING:

- # 1x TORQUE KING - LIGHT or HEAVY
- # 3x grub screws

II Required material/tools:


- # T-key (8mm)
- # Allen key (2,5mm)
- # Threadlocker
- # TORQUE KING 😊



III Installation instructions:

The motorcycle should be clean and dry before mounting.

- 1 remove* shift lever
- 2 remove* ignition cover screws
- 3 remove ignition cover*
- 4 turn the grub screws a few turns into the TORQUE KING and apply threadlocker to the grub screws
- 5 place the TORQUE KING with the **flat edge facing inwards** onto the rotor
- 6 make sure that the TORQUE KING lies flat all around
- 7 now tighten the three grub screws on the TORQUE KING
- 8 reassemble* ignition cover
- 9 reassemble* shift lever

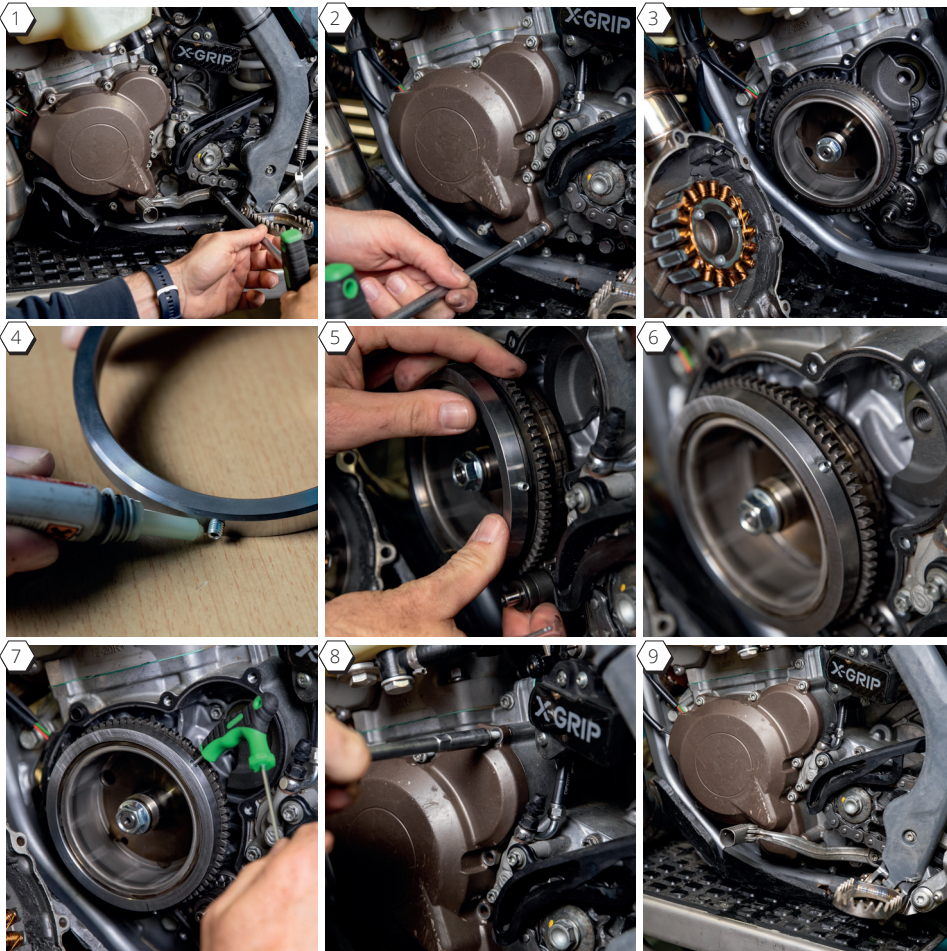

STAY ON TRACK

*according to manufacturer