

SKID PLATE BETA RR 250/300


SOTTOMOTORE BETA RR 250/350

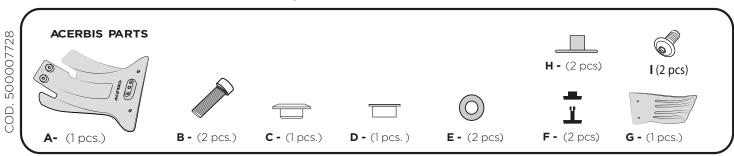




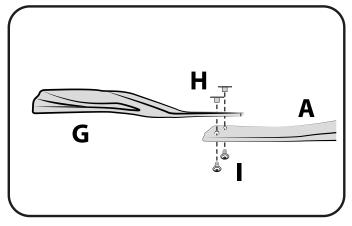

- 1 Assemble the linkage guard (G) to the skid plate(A) using the (H) washers and the (I) bolts.
- 1 Montare la pinna (G) utilizzando le staffe (H) e le viti (I).

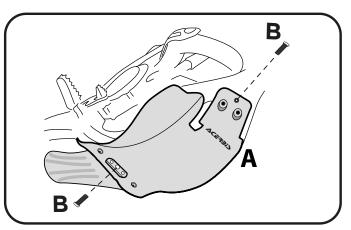

- 3 Place the skid plate (A) on the frame and fix it using the screws (B).
- 3 Posizionare sul telaio il sottomotore Acerbis (A) e bloccarlo utilizzando le viti (B).

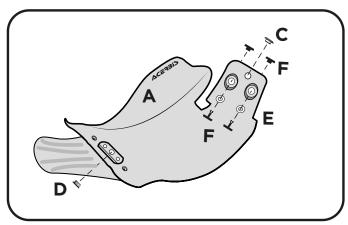

- 2 Remove the original skid plate unscrewing the two screws. Insert in the skid plate (A) the bushing (C) and (D), the plugs (F) and the washers (E).
- 2 Smontare il sottomotore originale togliendo le 2 viti. Inserire nel sottomotore (A) le boccole (C) e (D), i tappini (F) e le rondelle (E).

WARNING!

Use at your own risk. Check the security of your device before you ride. Be sure that you follow the instructions installing the Acerbis products. Do not ride if there is missing or damaged hardware. If this is the case, take the item immediately back to your dealer. Make sure the throttle and other controls are free every time you ride. Lack of attention to instruction and warning could lead to interference with the controls, loss of control, and an accidents. Acerbis recommends that installation must be done by a licensed mechanic and that only Acerbis is original parts are used during fitting. Acerbis makes no guarantees or representations, express or implied, regarding the fitness of its products for any particular purpose. Acerbis makes no guarantees or representations, express or implied, regarding the extent to which its product protect individuals or property from injury or death or damage.